


Installing Instructions
for
Implement Handle Helper Spring

ORDERING NUMBER

399 481 R91 - IMPLEMENT HANDLE HELPER SPRING Parts Accessory
for International Cub Cadet 70, 71, 72, 100, 102, 104, 105, 122, 123,
124 and 125 Tractors not equipped with the Hydraulic Unit.

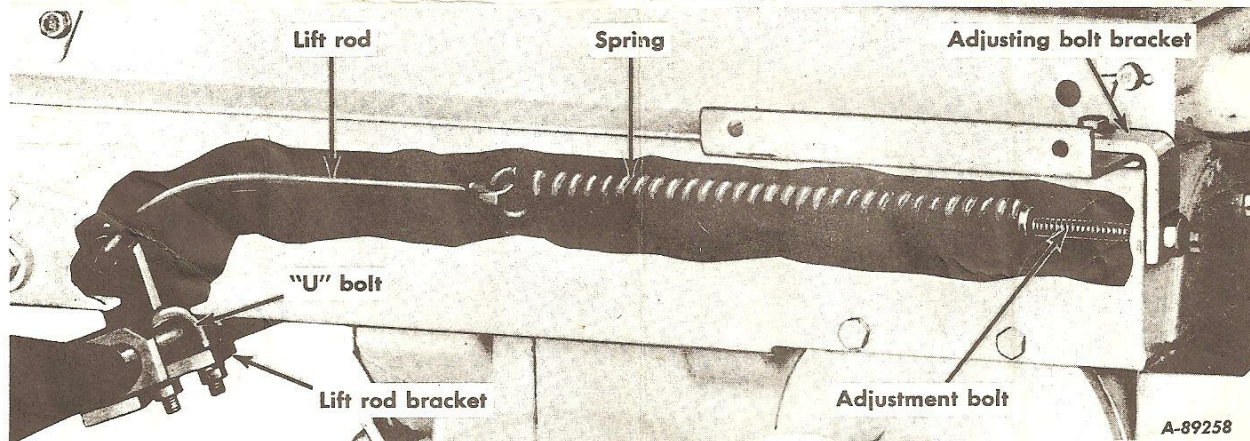

Illust. 1
View showing tractor lift handle helper spring.

INSTALLATION


Assemble the lift rod bracket to the lift shaft and secure it with the "U" bolt and two (2) 5/16-inch hex. nut and lockwashers.

Note: The leg of the bracket locates flush under the lift arm. See Illust. 1.

Connect the lift rod to the spring and insert them from the rear of the tractor along the inside and on left side of the frame. Then attach the end of the lift rod to the lift rod bracket and secure it with the 1/2-inch flat washer and the 5/32 x 1-inch cotter pin. See Illust. 1.

On all models remove the rear left capscrew from the seat support, then attach the adjusting bolt bracket to the seat support using a 3/8 x 1-inch hex. head capscrew and lockwasher. See Illust. 1. Insert the adjusting bolt through the hole of the bracket and screw it into the welded nut on the spring. Tighten the adjusting bolt to obtain the correct spring tension. Note: The lift effort can be varied by loosening or tightening the bolt. Then reinstall the previously removed panel to the seat support on the Cub Cadet 102, 104, 105, 122, 123, 124 and 125 Tractors.

Note: On the Cub Cadet 102, 104, 105, 122, 123, 124 and 125 Tractors the rear panel of the seat support must be removed so that the adjusting bolt bracket can be attached to the seat support. See Illust. 2.

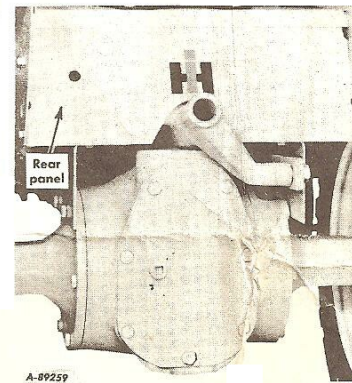

Illust. 2
Rear view of seat support panel.
(Cub Cadet 102, 104, 105, 122, 123,
124 and 125 Tractors)

INTERNATIONAL HARVESTER COMPANY
401 NORTH MICHIGAN AVE., CHICAGO, ILLINOIS 60611, U.S.A.